

General Notes:

- 1.) If a hydrant is found to be out-of-service for whatever reason the tester must contact the correct water company immediately. They also should put out a general alpha page to notify the entire department of the problem.
- 2.) Open and close all hydrants slowly, this also includes the four way hydrant valve.
- 3.) Existing hydrants must be eight inches to the ground from the center line of the 4 ½" steamer port.
- 4.) New hydrants must be fifteen inches to the ground from the centerline of the 4 ½" steamer port.
- 5.) The hydrant breakdown according to utility company is in the front of the BLUE hydrant book.

Color Code:

- Red Bonnets-** 500 g.p.m. or less
- Orange Bonnets-** 500 to 999 g.p.m.
- Green Bonnets-** 1000 to 1499 g.p.m.
- Blue Bonnets-** 1500 g.p.m. or higher

Utility Company Phone Numbers:

- A.C.U.B.- 457-3033
- N.A.C.U.B.- 426-2161
- Oliver Springs- 457-4298